

## **INSTRUCTION MANUAL**



Crimping tool for the application of wire end ferrules 0.14 - 6.0 mm<sup>2</sup>


Version AE2/03/17-REV. 0

MADE IN GERMANY

## Crimping



1 Close the tool until it opens automatically.

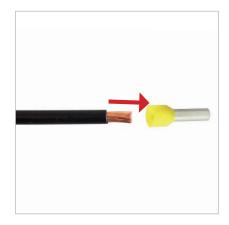


2 Strip the wire to the correct length and insert it into the terminal until stop.



3 Insert precisely stripped wire with the wire end ferrule into the profile. Close the tool until it opens automatically.



4 Remove correct crimped terminal out of the tool.

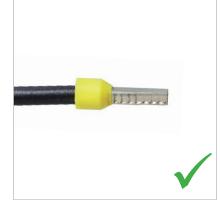

## Premature Release

In case of incorrect handling, the tool can be released prematurely:



 Push the release lever of the ratchet upwards. Tool opens automatically.





Do not use the crimp in case of a premature release!!!